

Introduction

The following instructions explains how to fill the AC (gas charge) with help of the control system Viper 2000.

For more information regarding Viper 2000, see

- Product sheet
- Installation sheet
- Function check
- User instructions





This document explains how to use the Viper 2000 when filling the AC system. All other AC system precautions must be considered during gas charge (see AC system supplier's documentation).

Instructions how to fill the AC system

Go to Test mode

1. Press  for 5 seconds and the following display is shown:

```
Verify TestMode
/| 20°C /* 20% #| 20°C ☀ 5
```

2. *Within 3 seconds*, press  (parking function button)
Now you are in view mode.
3. Press 
Now you are in test mode

Choose AC equipment

Here you select if you are going to fill the passenger AC or the driver AC (this is only applicable if there is a separate driver's AC equipment).

To select passenger's AC:

1. Press  and the following display is shown


```
Syst= 1 #|L #|L
D=0 † 0 --
```

To select driver's AC:


2. Press  and the following display is shown

```
Syst= 0 /|* /|*
D=0 -○ +● † 2 10,7V
```

Activate/Deactivate Gas charge mode

1. To activate gas charge press the SMOG  button (immediately after pressing the button gas charge begins) and this display is showing:

```
GasCharge
Clu: 100 Cond: 100 Vent: 100
```

2. To deactivate gas charge mode, just press the SMOG  button again.