

### Introduction



The product's ongoing operation and performance can only be guaranteed on the condition that service/maintenance are performed as described in the following service schedule and instructions and if the prescribed material is used.

### Service intervals

*When first delivered and before every operating season / annually:*


- Check that the filter is not blocked.  
Rinse clean if necessary.

### Instructions

Replacement or cleaning of the filter must be performed according to the following instructions:


1. Switch off the valve as shown in the diagram.

*Figure no.1*

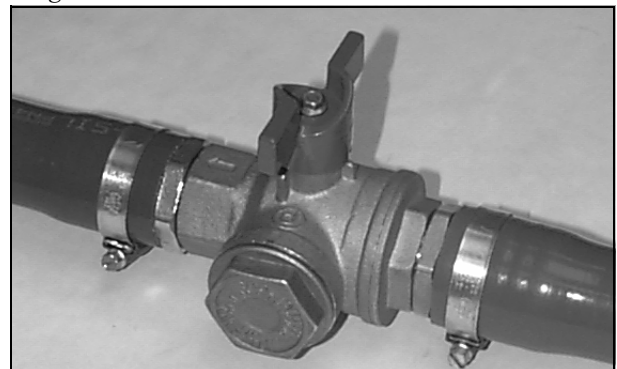


2. Remove the filter plug.

Figure no.2

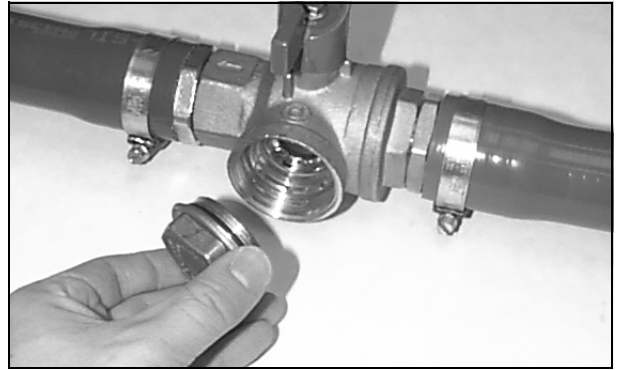

3. Remove guide ring (1) and filter (2).


Figure no.3

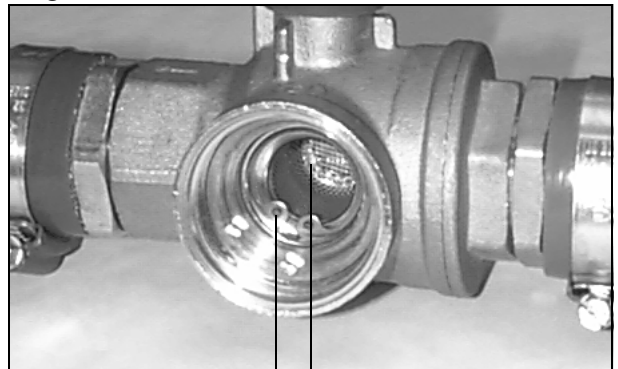

1 2

4. Clean the filter or replace it if it is damaged. Filter screens can be ordered from UWE, for article numbers see product sheet PRD0068.
5. Replace the filter and guide ring.
6. Screw in the filter plug with a torque of 10 Nm.

Figure no.4

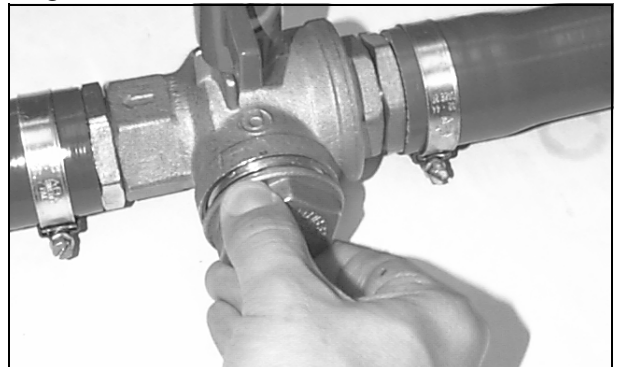

7. Set the valve to the open position, see diagram.

*Figure no.5*

